



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>259</b>				<b>ALL</b>	
R025	C00801	CKT BKR-GENERATOR CIRCUIT BREAKER-1	24-22-31	PP508-PP517	
R025	C00801	CKT BKR-GEN BREAKER 1	24-22-31	PR021-PS963	
R025	C00802	CKT BKR-GENERATOR CIRCUIT BREAKER-2	24-22-31	PP508-PP517	
R025	C00802	CKT BKR-GEN BREAKER 2	24-22-31	PR021-PS963	
R025	C00891	CKT BKR-EXTERNAL POWER CONTACTOR NO.1	24-22-31	PP508-PP517	
R025	C00891	CKT BKR-EXTERNAL POWER CONTACTOR 1	24-22-31	PR021-PS963	
R025	C00892	CKT BKR-EXT PWR CONTACTOR NO.2	24-22-31	PP508-PP517	
R025	C00892	CKT BKR-EXT PWR CONTACTOR 2	24-22-31	PR021-PS963	

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section 259  
Page 1 End  
Mar 29/2012



Panel/Access Door	Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
APU				ALL
	C00539	CKT BKR-HOURMETER	49-31-01	ALL

---

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section APU  
Page 1 End  
Mar 29/2012



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>J009-00</b>				<b>ALL</b>	
C001	C00798	CKT BKR-APU START	49-31-01	PP508-PP517, PR022-PS963	
L010	C00542	CKT BKR-EXTERNAL POWER DC	24-31-21	ALL	
L020	C00142	CKT BKR-BAT CHG	24-31-21	ALL	

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section J009-00

Page 1 End

Mar 29/2012



<b>Panel/Access Door</b>	<b>Description</b>	<b>Description</b>	<b>Diagram</b>	<b>Effectivity</b>
Grid No	Ckt Bkr		Diagram	
<b>P006-00</b>	<b>PNL-LOAD CONTROL CENTER,RIGHT</b>		<b>24-51-31</b>	<b>ALL</b>
	C00889	CKT BKR-APU GENERATOR BREAKER NO.1	24-22-31	PP508-PP517
	C00889	CKT BKR-APU GEN BREAKER 1	24-22-31	PR021-PS963
	C00890	CKT BKR-APU GENERATOR BREAKER NO.2	24-22-31	PP508-PP517
	C00890	CKT BKR-APU GEN BREAKER 2	24-22-31	PR021-PS963
	C01268	CKT BKR-ENG 2 SYNC-LOCK ALTN	78-32-61	PP508-PP517

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-00  
Page 1 End  
Mar 29/2012



Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P006-01</b>	<b>PNL-CB ELEX SYS F/O</b>		<b>91-03-18</b>	<b>ALL</b>
	C00857	CKT BKR-HF 2 XCVR	23-11-21	PP508-PP517
A006	C00461	CKT BKR-STALL WARN AC 2	27-32-22	PP508-PP510
A006	C01207	CKT BKR-SMC 2 SNSR EXC 115V AC	27-32-22	PP511-PS963
A007	C00460	CKT BKR-STALL WARN DC 2	27-32-22	PP508-PP510
A007	C01206	CKT BKR-SMC 2 CMPTR 28V DC	27-32-22	PP511-PS963
A008	C00756	CKT BKR-F/O RDDMI	34-21-01	PP508-PP517
A008	C00756	CKT BKR-F/O RDDMI	34-21-02	PR021-PS963
A009	C00176	CKT BKR-COMPARATOR	34-25-01	PR021-PS963
A010	C00177	CKT BKR-COMPARATOR	34-25-01	PR021-PS963
A012	C00050	CKT BKR-INST XFMR NO.2	34-21-01	PP508-PP517
A012	C00050	CKT BKR-INST XMFR NO.2	34-21-02	PR021-PS963
A013	C01237	CKT BKR-GPS-2	34-58-21	PR021-PS963
A015	C00172	CKT BKR-VOR/ILS-2	34-31-02	ALL
B004	C00356	CKT BKR-F/O ALT 26VAC	34-11-21	ALL
B005	C00499	CKT BKR-NO.2 AUTO XFMR	24-58-21	ALL
B006	C00426	CKT BKR-AIR DATA CMPTR NO.2 26V AC	34-11-21	ALL
B007	C00445	CKT BKR-AIR DATA CMPTR NO.2 115V AC	34-11-21	ALL
B008	C01263	CKT BKR-DC FMCS TRANSFER MRAS737TOM-03	34-61-21	PP517
B008	C01263	CKT BKR-FMCS XFER (INOP)	34-61-21	PR021-PS963
B009	C01262	CKT BKR-AC FMCS CMPTR NO.2 MRAS737TOM-03	34-61-01	PP517
B009	C01262	CKT BKR-FMCS CMPTR NO.2 (INOP)	34-61-01	PR021-PS963
B010	C01239	CKT BKR-AC MCDU NO.2	34-61-01	PR021-PS963
B014	C01127	CKT BKR-ADF-2 AC	34-57-21	ALL
B015	C00061	CKT BKR-ADF 2 DC	34-57-21	ALL
C002	C00166	CKT BKR-VHF NO 2	23-12-21	ALL
C004	C00687	CKT BKR-F/O VSI 115VAC	34-26-24	ALL
C005	C00469	CKT BKR-F/O MACH AIRSPEED IND 26V AC	34-11-22	ALL
C007	C00549	CKT BKR-MACH WARN SYS 2	34-16-02	ALL
C009	C01246	CKT BKR CREW CALL HORN	23-42-01	PP511-PS963
C010	C01114	CKT BKR-EFIS SYM GEN R	34-22-21	ALL
C010	C01246	CKT BKR CREW CALL HORN	23-42-01	PP508-PP510
C011	C01111	CKT BKR-EFIS CONT PNL R	34-22-21	ALL
C012	C01112	CKT BKR-EADI R	34-22-21	ALL
C013	C01113	CKT BKR-EHSI R	34-22-21	ALL
C015	C00321	CKT BKR-RADIO ALT NO 2	34-33-21	ALL
C016	C00192	CKT BKR-DME-2 AC	34-55-21	ALL
D002	C00857	CB-HF-2	23-11-21	PR021-PS963
D004	C00059	CKT BKR-SELCAL 2	23-22-01	PP508-PP517
D005	C00082	CKT BKR-PA AMPL BAT	23-31-01	ALL
D006	C00080	CKT BKR-AC-TAPE REPRODUCER	23-31-01	ALL

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-01

Page 1

Mar 29/2012



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P006-01</b>	<b>PNL-CB ELEX SYS F/O (continued)</b>				
D007	C00081	CKT BKR-DC-TAPE REPRODUCER	23-31-01	PP508-PP517	
D008	C01030	CKT BKR-DAA/FMC NO.2-AC	34-26-21	ALL	
D009	C01012	CKT BKR-DAA/IRS AC NO 2	34-26-21	ALL	
D010	C01014	CKT BKR-DC DAA NO.2	34-26-21	ALL	
D011	C01008	CKT BKR-AC IRS NO 2	34-26-21	ALL	
D012	C01010	CKT BKR-DC IRS NO 2	34-26-21	ALL	
D013	C01061	CKT BKR-DC DAA/FMC-2	34-26-21	ALL	
D015	C00120	CKT BKR-WR R/T	34-41-01	ALL	
D016	C00188	CKT BKR-ATC-2	34-53-21	ALL	
D017	C01194	CKT BKR-ATC ANT SWITCH	34-53-11	PP511-PS963	
E013	C00824	CKT BKR-NO 2 ELEX BUS AC	24-58-21	ALL	
E015	C00038	CKT BKR-NO 2 ELEX DC BUS	24-58-11	PP508-PP517	
E015	C00038	CKT BKR-NO.2 ELEX BUS DC	24-58-11	PR021-PS963	

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-01

Page 2 End

Jun 03/2016



Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P006-02</b>	<b>PNL-ENG + FL.CONT A/P INPH + F</b>		<b>24-51-31</b>	<b>ALL</b>
	C00175	CKT BKR-ENG 2 T/R CONT ALTN	78-32-61	PP508-PP517
	C01266	CKT BKR-ENG 1 SYNC-LOCK	78-32-51	PP508-PP517
	C01267	CKT BKR-ENG 2 SYNC-LOCK	78-32-61	PP508-PP517
A002	C01186	CKT BKR-EIS SEC 1	79-31-02	PP508-PP517
A002	C01186	CKT BKR-EIS SEC 1 OIL,VIB,HYD	79-31-02	PR021-PS963
A003	C01187	CKT BKR-EIS SEC 3	79-31-02	PP508-PP517
A003	C01187	CKT BKR-EIS SEC 2 OIL,VIB,HYD	79-31-02	PR021-PS963
A004	C00794	CKT BKR-ENGINE IDLE CONTROL	73-23-11	ALL
A005	C00793	CKT BKR-ENGINE MASTER CAUTION	73-24-11	ALL
A007	C00154	CKT BKR-START VLV ENG 2	80-11-11	ALL
A008	C01103	CKT BKR-START VLV ENG 1	80-11-11	ALL
A009	C01074	CKT BKR-FLT CONT SOV	27-31-01	ALL
A010	C00363	CKT BKR-FLT CONT SOV	27-31-01	ALL
A011	C00204	CKT BKR-SPOILER SOV	27-61-01	ALL
A012	C00362	CKT BKR-STBY RUD SOV	27-31-01	ALL
A013	C00210	CKT BKR-FLT CONTROLS FLAP SOV	27-53-01	PP508-PP517
A014	C00566	CKT BKR-FLAP LOAD RELIEF	27-54-01	PP508-PP517
A014	C00768	CKT BKR-HYD SYS ELEC HYD PUMP CONT SYS B	29-21-01	PR021-PS963
A015	C00767	CKT BKR-HYD SYS ELEC HYD PUMP CONT SYS A	29-21-01	PR021-PS963
A015	C00768	CKT BKR-HYD SYS ELEC HYD PUMP CONT SYS B	29-21-01	PP508-PP517
A016	C00767	CKT BKR-HYD SYS ELEC HYD PUMP CONT SYS A	29-21-01	PP508-PP517
A017	C00306	CKT BKR-HYD SYSTEM BPI	29-32-01	ALL
A018	C00240	CKT BKR-INPH STBY PWR	24-58-21	PP508-PP517
A019	C00239	CKT BKR-INPH PWR DC	24-58-21	PP508-PP517
A020	C00196	CKT BKR-ANTI-SKID INBD	32-41-01	PP508-PP517
A020	C00240	CKT BKR-INPH STBY PWR	24-58-21	PR021-PS963
A021	C00195	CKT BKR-ANTI-SKID OUTBD	32-41-01	PP508-PP517
A021	C00239	CKT BKR-INPH PWR DC	24-58-21	PR021-PS963
A022	C00407	CKT BKR-FIRE PROTECTION DET ENG 2	26-11-21	ALL
A023	C00403	CKT BKR-FIRE PROTECTION DET APU	26-11-31	ALL
A024	C00405	CKT BKR-FIRE PROTECTION DETECTION ENG 1	26-11-11	ALL
B001	C01064	CKT BKR-AFCS B-MACH TRIM DC	22-18-11	ALL
B002	C01037	CKT BKR-AFCS B-MACH TRIM AC	22-18-11	ALL
B003	C01047	CKT BKR-AFDS-MCP CRS 2 DC	22-11-61	ALL
B003	C01197	CKT BKR-ENG IDLE IND	73-23-12	PP511-PP514
B004	C01076	CKT BKR-ENG VIB MONITOR	77-31-11	ALL
B005	C00459	CKT BKR-ENG NO.2 IGN R	74-11-11	ALL
B006	C00151	CKT BKR-ENG NO.2 IGN L	74-11-11	ALL
B007	C00458	CKT BKR-ENG NO.1 IGN R	74-11-11	ALL
B008	C00153	CKT BKR-ENG NO.1 IGN L	74-11-11	ALL

CIRCUIT BREAKER LIST

D6-9129J

91-02-00

Section P006-02

Page 1

Mar 29/2012



# 737-300 WIRING DIAGRAM MANUAL

Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P006-02</b>	<b>PNL-ENG + FL.CONT A/P INPH + F (continued)</b>			
B009	C00440	CKT BKR-AUTO SPBK	27-62-01	ALL
B011	C00840	CKT BKR-STAB TRIM ACT	27-41-01	ALL
B013	C00207	CKT BKR-STAB TRIM CONT	27-41-01	ALL
B014	C01067	CKT BKR-AUTOSLAT NO.1 AC	27-83-11	PP508-PP510
B015	C01068	CKT BKR-AUTOSLAT-1 DC	27-83-11	ALL
B016	C00780	CKT BKR-NO 2 ENG HYD PUMP DEPRESS	29-11-01	ALL
B017	C00779	CKT BKR-NO 1 ENG HYD PUMP DEPRESS	29-11-01	ALL
B018	C00348	CKT BKR-HYD SOV ENG NO 2	29-11-01	ALL
B019	C00347	CKT BKR-HYD SOV ENG NO 1	29-11-01	ALL
B020	C00086	CKT BKR-F/O AUDIO	23-51-15	ALL
B021	C00083	CKT BKR-CAPT AND AUDIO	23-51-15	PP508-PP517
B021	C00083	CKT BKR-CAPT AUDIO	23-51-15	PR021-PS963
B022	C00194	CKT BKR-ANTI-SKID FAIL WARN & PARK BK	32-41-01	PP508-PP517
B023	C00396	CKT BKR-MASTER WARN & CONT	26-11-21	ALL
B024	C00388	CKT BKR-OVHT WHL WELL WING BODY	26-12-11	ALL
C001	C01042	CKT BKR-AFCS B-SNSR EXC AC	22-11-21	ALL
C002	C01046	CKT BKR-AFCS B-FCC DC	22-11-61	ALL
C003	C00716	CKT BKR-AFCS B-ENGAGE INTLK B	22-11-72	ALL
C004	C00374	CKT BKR-AFCS B-WARN LIGHT (BAT)	22-14-11	ALL
C005	C01004	T/R IND ENG 2	78-31-11	ALL
C006	C00277	CKT BKR-T/R ENG 2	78-32-21	ALL
C007	C01003	T/R IND ENG 1	78-31-11	ALL
C008	C00276	CKT BKR-T/R REV ENG 1	78-32-11	ALL
C009	C00786	CKT BKR-AILERON TRIM CONTROL	27-11-01	ALL
C010	C00787	CKT BKR-RUDDER TRIM CONTROL	27-21-01	ALL
C011	C00788	CKT BKR-RUDDER TRIM INDICATOR	27-28-01	ALL
C012	C00211	CKT BKR-LE FLAP POS IND DC	27-81-11	ALL
C013	C00213	CKT BKR-TE FLAP POS IND	27-52-01	ALL
C014	C01069	CKT BKR-AUTOSLAT NO.2 AC	27-83-21	PP508-PP510
C015	C01070	CKT BKR-AUTO SLAT NO.2 DC	27-83-21	ALL
C016	C01188	CKT BKR-EIS SEC 2	79-31-02	PP508-PP517
C016	C01188	CKT BKR-EIS SEC 3	79-31-02	PR021-PS963
C017	C01189	CKT BKR-EIS SEC 4	79-31-02	ALL
C018	C01447	CB-RUDDER LOAD LIMITER (SB 27-1255)	27-31-01	ALL
C019	C00085	CKT BKR-OBS AUDIO	23-51-15	ALL
C019	C01628	CB-FORCE FIGHT MONITOR (SB 27-1255)	27-31-01	ALL
C020	C00084	CKT BKR-INPH AND WARN	23-51-15	ALL
C020	C00129	CKT BKR-LDG LATCH & PRESS WARN	32-30-01	PP508-PP517
C021	C00404	CKT BKR-LND GR AIR/GND RLY & LTS	32-31-01	PP508-PP517
C022	C00297	CKT BKR-EXT BOTTLES R	26-21-01	ALL

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P006-02

Page 2

Jun 03/2016





Panel/Access Door		Description		Diagram	Effectivity
Grid No	Ckt Bkr	Description		Diagram	
<b>P006-02</b>	<b>PNL-ENG + FL.CONT A/P INPH + F (continued)</b>				
C023	C00452	CKT BKR-EXT BOTTLES APU		26-21-01	ALL
C024	C00296	CKT BKR-EXT BOTTLES L		26-21-01	ALL
D001	C01182	CKT BKR-EIS PRIM 1		77-12-01	ALL
D002	C01183	CKT BKR-EIS PRIM 3		77-12-01	ALL
D003	C01184	CKT BKR-EIS PRIM 2		77-12-01	ALL
D004	C01185	CKT BKR-EIS PRIM 4		77-12-01	ALL
D005	C01267	CKT BKR-ENG 2 SYNC-LOCK		78-32-61	PR021-PS963
D006	C01268	CKT BKR-ENG 2 SYNC-LOCK ALTN		78-32-61	PR021-PS963
D007	C00175	CKT BKR-ENG 2 T/R CONT ALTN		78-32-61	PR021-PS963
D008	C01266	CKT BKR-ENG 1 SYNC-LOCK		78-32-51	PR021-PS963
D010	C00841	CKT BKR-ALT TE FLAP DRIVE		27-53-01	ALL
D012	C00210	CKT BKR-FLT CONTROLS FLAP SOV		27-53-01	PR021-PS963
D012	C01081	CB-PTU/LG BYPASS VLV CONT 1		29-25-01	PP508-PP517
D013	C00566	CKT BKR-FLAP LOAD RELIEF		27-54-01	PR021-PS963
D013	C01085	CKT BKR-PTU/LG BYPASS VLV CONT 2		29-25-01	PP508-PP517
D014	C00781	CKT BKR-LDG GR XFR VLV PRI. CONT		29-23-01	ALL
D015	C00799	CKT BKR-LDG GR XFR VLV SEC CONT		29-23-01	ALL
D016	C01226	CKT BKR-EIS SEC 5		29-32-01	ALL
D017	C01227	CKT BKR-EIS SEC 6		29-32-01	ALL
D018	C00561	CKT BKR-F/O BAT INPH PWR		24-58-21	PP508-PP517
D018	C01081	CKT BKR-PTU/LG BYPASS VLV CONT 1		29-25-01	PR021-PS963
D019	C00560	CKT BKR-F/O NO.2 INPH PWR		24-58-21	PP508-PP517
D019	C01085	CKT BKR-PTU/LG BYPASS VLV CONT 2		29-25-01	PR021-PS963
D020	C00561	CKT BKR-F/O BAT INPH PWR		24-58-21	PR021-PS963
D020	C01027	CKT BKR-NOSE GEAR STEER		32-51-01	PP508-PP517
D021	C00560	CKT BKR-F/O NO.2 INPH PWR		24-58-21	PR021-PS963
D021	C00772	CKT BKR-NOSE STEER AIR/GND		32-31-01	PP508-PP517
D022	C00451	CKT BKR-AURAL WARN		31-26-01	PP508-PP517
D023	C01022	CKT BKR-EXT BOTTLE RIGHT		26-21-01	ALL
D024	C01021	CKT BKR-EXT BOTTLE LEFT		26-21-01	ALL

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-02

Page 3 End

Jun 03/2016



# 737-300 WIRING DIAGRAM MANUAL

Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P006-03</b>	<b>PNL-CONT CAB LTG FUEL SYS + M</b>		<b>24-51-31</b>	<b>ALL</b>
A001	C00736	CKT BKR-CLOCK DISPLAY	31-22-01	ALL
A002	C00209	CKT BKR-DOOR WARN	52-71-01	ALL
A003	C00355	CKT BKR-FUEL TEMP IND	28-42-01	ALL
A004	C00397	CKT BKR-FUEL QTY	28-44-01	ALL
A007	C00398	CKT BKR-EXT PWR GRD FUELING	28-44-01	ALL
A009	C00282	CKT BKR-DOME LTS-WHITE	33-16-01	ALL
A010	C00283	CKT BKR-CONT STAND LT	33-16-01	ALL
A011	C01028	CKT BKR-PILOTS STANDBY LTS	33-14-01	ALL
A012	C00160	CKT BKR-PILOTS FLUOR LTS	33-14-01	ALL
A013	C00161	CKT BKR-STBY COMPASS	33-14-01	ALL
A014	C00308	CKT BKR-MAP AND KIT LTS	33-17-01	ALL
A015	C00309	CKT BKR-OBSERVERS READING LTS	33-17-01	ALL
A017	C00583	CKT BKR-AUTOBRAKE CONTROL	32-42-01	ALL
A018	C01243	CKT BKR-FUEL PANEL INDICATORS	28-41-02	PP508-PP510
A018	C01243	CKT BKR-FUEL PANEL INDICATES	28-44-01	PP511-PP517
B001	C00737	CKT BKR-CLOCK	31-22-01	ALL
B003	C00829	CKT BKR-TANK 2 FWD BOOST PUMP	28-23-01	ALL
B005	C00540	CKT BKR-FUEL SOV	28-21-01	ALL
B007	C00827	CKT BKR-TANK 1 FWD BOOST PUMP	28-23-01	ALL
B011	C00335	CKT BKR-F/O PNL 28V AC PRIM	33-11-21	ALL
B012	C00331	CKT BKR-CAPT/CTR PNLS 28V PRIM	33-11-11	ALL
B013	C00310	CKT BKR-MASTER DIM BUS IND-BAT	33-18-11	ALL
B014	C00311	CKT BKR-MAST DIM NO.1 DC	33-18-11	ALL
B015	C00312	CKT BKR-MAST DIM NO.2 DC	33-18-11	ALL
B016	C01240	CKT BKR-FUEL QTY IND-R TANK	28-41-02	PP508-PP510
B017	C01244	CKT BRK-FUEL QTY IND-CTR & AUX TANK	28-41-03	PP508-PP510
B017	C01244	CKT BKR-FUEL QTY IND-CTR & AUX TANK	28-41-01	PP511-PP517
B018	C01242	CKR BRK-FUEL QTY IND-L TANK	28-41-03	PP508-PP510
B018	C01242	CKT BRK-FUEL QTY IND-L TANK	28-41-01	PP511-PP517
C001	C00137	CKT BKR-DOOR LOCK	52-51-01	ALL
C003	C00828	CKT BKR-TANK 2 AFT BOOST PUMP	28-23-01	ALL
C005	C00361	CKT BKR-FUEL CROSSFEED VLV	28-22-01	ALL
C007	C00826	CKT BKR-TANK 1 AFT BOOST PUMP	28-23-01	ALL
C009	C00284	CKT BKR-ELEX PANEL LTS	33-11-41	ALL
C011	C00219	CKT BKR-CKT BKR PNL LTS	33-15-01	ALL
C012	C00133	CKT BKR-DIM AND TEST	33-18-01	ALL
C013	C00313	CKT BKR-MAST DIM SECT 1	33-18-11	ALL
C014	C00314	CKT BKR-MAST DIM SECT 2	33-18-11	ALL
C015	C00315	CKT BKR-MAST DIM SECT 3	33-18-11	ALL
C017	C00129	CKT BKR-LDG LATCH & PRESS WARN	32-31-01	PR021-PS963

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P006-03

Page 1

Mar 29/2012



Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P006-03</b>	<b>PNL-CONT CAB LTG FUEL SYS + M (continued)</b>			
	C018	CKT BKR-LND GR AIR/GND RLY & LTS	32-31-01	PR021-PS963
	D001	CKT BKR-LAV MIRROR EXT PWR	33-26-31	ALL
	D003	CKT BKR-ENG 2 FUEL SOV	28-21-01	ALL
	D005	CKT BKR-CTR TANK R BOOST PUMP	28-23-01	ALL
	D007	CKT BKR-ENG 1 FUEL SOV	28-21-01	ALL
	D008	CKT BKR-MSTR CAUTION AIR COND	33-18-22	ALL
	D009	CKT BKR-MSTR CAUTION ANTI-ICE	33-18-22	ALL
	D010	CKT BKR-MSTR CAUTION FUEL	33-18-22	ALL
	D011	CKT BKR-MASTER CAUTION-BUSNO.1	33-18-21	ALL
	D012	CKT BKR-MASTER CAUTION-BAT	33-18-21	ALL
	D013	CKT BKR-MAST DIM SECT 4	33-18-11	ALL
	D014	CKT BKR-MAST DIM SECT 5	33-18-11	ALL
	D015	CKT BKR-MAST DIM SECT 6	33-18-11	ALL
	D016	CKT BKR-NOSE GEAR STEER	32-51-01	PR021-PS963
	D017	CKT BKR-PS IND F/O	30-31-01	PP508-PP517
	D017	CKT BKR-NOSE GEAR AIR/GND	32-31-01	PR021-PS963
	D018	CKT BKR-AURAL WARN	31-26-01	PR021-PS963
	D018	CKT BKR-CAPT PS IND	30-31-01	PP508-PP517
	E001	CKT BKR-SERVICE OUT 115V AC	25-29-01	ALL
	E003	CB-BST PMP CNT 1AFT,2FWD,CTR L,AUX AFT	28-23-01	PP508-PP517
	E003	CKT BKR-FUEL CONT 1 AFT,2 FWD,CTR L	28-23-01	PR021-PS963
	E005	CKT BKR-CTR TANK L BOOST PUMP	28-23-01	ALL
	E007	CB-BST PMP CNT 1FWD,2AFT,CTR R,AUX FWD	28-23-01	PP508-PP517
	E007	CKT BKR-FUEL CONT 1 FWD,2 AFT,CTR R	28-23-01	PR021-PS963
	E009	CKT BKR-OVHD LTG 28V AC PRIM	33-12-01	ALL
	E011	CKT BKR-OVHD LTG 28V AC SEC	33-12-01	ALL
	E013	CKT BKR-AFCS FLDT	33-14-01	ALL
	E014	CKT BKR-MASTER DIM SECT 7	33-18-19	ALL
	E015	CKT BKR-MASTER DIM SECT 8	33-18-19	ALL
	E016	CKT BKR-ANTI-SKID INBD	32-41-01	PR021-PS963
	E017	CKT BKR-ANTI-SKID OUTBD	32-41-01	PR021-PS963
	E018	CKT BKR-ANTI-SKID FAIL WARN & PARK BK	32-41-01	PR021-PS963
	F001	CKT BKR-SERVICE OUT 28V DC	25-29-01	ALL
	F003	CKT BKR-AFT AUX TK FWD PUMP	28-23-02	PP508-PP517
	F003	CKT BKR-FUEL QTY IND-R TANK	28-41-01	PP511-PS963
	F004	CKT BKR-FUEL QTY IND-CTR TANK	28-41-01	PR021-PS963
	F005	CKT BKR-AUX TK FUELING	28-44-02	PP508-PP517
	F005	CKT BKR-FUEL QTY IND-L TANK	28-41-01	PR021-PS963
	F006	CKT BKR-FUEL PANEL INDICATORS	28-44-01	PR021-PS963
	F007	CKT BKR-AFT AUX TK AFT PUMP	28-23-02	PP508-PP517

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-03

Page 2

Jun 03/2016



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P006-03</b>		<b>PNL-CONT CAB LTG FUEL SYS + M (continued)</b>			
F009	C00326	CKT BKR-OVHD LTG 5V AC SEC	33-12-01	ALL	
F010	C00327	CKT BKR-OVHD LTG 5V AC SEC	33-12-01	ALL	
F011	C00328	CKT BKR-OVHD LTG 5V AC SEC	33-12-01	ALL	
F012	C00329	CKT BKR-OVHD LTG 5V AC SEC	33-12-01	ALL	
F013	C00330	CKT BKR-OVHD LTG 5V AC SEC	33-12-01	ALL	
F014	C00390	CKT BKR-OVHD LTG 5V AC SEC	33-12-01	ALL	
F017	C00570	CKT BKR-PS IND F/O	30-31-01	PR021-PS963	
F018	C00569	CKT BKR-CAPT PS IND	30-31-01	PR021-PS963	

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-03  
Page 3 End  
Jun 03/2016



Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P006-04</b>	<b>PNL-A/C AIRSTAIRS CONT.A/C PWR</b>		<b>24-51-31</b>	<b>ALL</b>
A001	C00345	CKT BKR-TEMP CONTROL 35 DEG F CONT R	21-66-01	ALL
A002	C00344	CKT BKR-TEMP CONTROL 35 DEG F CONT L	21-66-01	ALL
A003	C00258	CKT BKR-TEMP CONTROL AUTOMATIC R	21-61-01	ALL
A004	C00268	CKT BKR-TEMP CONTROL AUTOMATIC L	21-61-01	ALL
A005	C00267	CKT BKR-TEMP CONTROL MANUAL	21-61-01	ALL
A008	C00806	CKT BKR-T/R NO.1	24-32-01	PP508-PP517
A008	C00806	CKT BKR-TR UNIT NO.1	24-32-01	PR021-PS963
A010	C00014	CKT BKR-GEN NO.1 AC IND	24-21-11	PP508-PP517
A010	C00014	CKT BKR-AC IND GEN NO.1	24-21-11	PR021-PS963
A011	C00015	CKT BKR-APU GEN AC IND	24-21-31	PP508-PP517
A011	C00015	CKT BKR-AC IND GEN APU	24-21-31	PR021-PS963
A012	C00016	CKT BKR-GEN NO.2 AC IND	24-28-11	PP508-PP517
A012	C00016	CKT BKR-AC IND GEN NO.2	24-28-11	PR021-PS963
A013	C00017	CKT BKR-GRD SERV BUS IND A	24-28-21	PP508-PP517
A013	C00017	CKT BKR-AC IND GND SERVICE-A	24-28-21	PR021-PS963
A014	C00018	CKT BKR-GRD SERV BUS IND B	24-28-21	PP508-PP517
A014	C00018	CKT BKR-AC IND GND SERVICE B	24-28-21	PR021-PS963
A015	C00019	CKT BKR-GRD SERV BUS IND C	24-28-21	PP508-PP517
A015	C00019	CKT BKR-AC IND GND SERVICE-C	24-28-21	PR021-PS963
A016	C00409	CKT BKR-FORWARD AIRSTAIRS DOOR	52-61-01	ALL
A017	C00246	CKT BKR-FWD AIR STAIRS CONT	52-61-01	ALL
A018	C00270	CKT BKR-FWD A/S TREAD LTS	33-46-01	ALL
B001	C00259	CKT BKR-AIR COND BLEED AIR VALVES ISO	36-11-01	ALL
B002	C00797	CKT BKR-AIR COND BLEED AIR VALVES R	36-11-01	ALL
B003	C00796	CKT BKR-AIR COND BLEED AIR VALVES L	36-11-01	ALL
B004	C01015	CKT BKR-AIR COND RECIRC FAN CONTROL	21-27-01	ALL
B005	C01023	CKT BKR-RECIRC FAN ENERGIZED	21-27-01	ALL
B006	C01065	CKT BKR-DC BUS TIE NO. 1	24-32-01	PP508-PP517
B006	C01065	CKT BKR-DC BUS 1	24-32-01	PR021-PS963
B010	C00011	CKT BKR-BUS 2 AC IND-A	24-28-21	PP508-PP517
B010	C00011	CKT BKR-AC IND BUS NO.2-A	24-28-21	PR021-PS963
B011	C00012	CKT BKR-BUS 2 AC IND-B	24-28-21	PP508-PP517
B011	C00012	CKT BKR-AC IND BUS NO.2-B	24-28-21	PR021-PS963
B012	C00013	CKT BKR-BUS 2 AC IND-C	24-28-21	PP508-PP517
B012	C00013	CKT BKR-AC IND BUS NO.2-C	24-28-21	PR021-PS963
B013	C00008	AC IND BUS NO. 1-A	24-28-21	PP508-PP517
B013	C00008	CKT BKR-AC IND BUS NO.1-A	24-28-21	PR021-PS963
B014	C00009	AC IND BUS NO. 1-B	24-28-21	PP508-PP517
B014	C00009	CKT BKR-AC IND BUS NO. 1-B	24-28-21	PR021-PS963
B015	C00010	CKT BKR-BUS 1 AC IND-C	24-28-21	PP508-PP517

CIRCUIT BREAKER LIST

D6-9129J

91-02-00

Section P006-04

Page 1

Mar 29/2012



# 737-300 WIRING DIAGRAM MANUAL

Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P006-04</b>	<b>PNL-A/C AIRSTAIRS CONT.A/C PWR (continued)</b>			
B015	C00010	CKT BKR-AC IND BUS NO.1-C	24-28-21	PR021-PS963
B017	C00850	CKT BKR-FWD AIRSTAIRS-AC	52-61-01	ALL
C001	C00266	CKT BKR-AIR COND VALVES TURBOFAN R	21-64-03	PP508-PP510
C001	C00266	CKT BKR-AIR COND VALVES TURBOFAN R	21-64-01	ALL
C002	C00265	CKT BKR-AIR COND VALVES TURBOFAN L	21-64-02	PP508-PP510
C002	C00265	CKT BKR-AIR COND VALVES TURBOFAN L	21-64-01	ALL
C003	C00263	CKT BKR-AIR COND VALVES PACK R	21-62-01	ALL
C004	C00262	CKT BKR-AIR COND VALVES PACK L	21-62-01	ALL
C005	C00429	CKT BKR-AIR COND VALVES FWD OUTFLOW	21-32-01	ALL
C008	C00807	CKT BKR-T/R NO.2	24-32-01	PP508-PP517
C008	C00807	CKT BKR-TR UNIT NO.2	24-32-01	PR021-PS963
C010	C00069	CKT BKR-TRANS BUS 2 AC IND-A	24-28-21	PP508-PP517
C010	C00069	CKT BKR-AC IND XFER BUS 2-A	24-28-21	PR021-PS963
C011	C00070	CKT BKR-TRANS BUS 2 AC IND-B	24-28-21	PP508-PP517
C011	C00070	CKT BKR-AC IND XFER BUS 2-B	24-28-21	PR021-PS963
C012	C00071	CKT BKR-XFER BUS 2 AC IND-C	24-28-21	PP508-PP517
C012	C00071	CKT BKR-AC IND XFER BUS 2-C	24-28-21	PR021-PS963
C013	C00066	CKT-BKR-XFER BUS 1 AC IND-A	24-28-21	PP508-PP517
C013	C00066	CKT-BKR-AC IND XFER BUS 1-A	24-28-21	PR021-PS963
C014	C00067	CKT BKR-TRANS BUS 1 AC IND-B	24-28-21	PP508-PP517
C014	C00067	CKT BKR-AC IND XFER BUS 1-B	24-28-21	PR021-PS963
C015	C00068	CKT BKR-TRANS BUS 1 AC IND-C	24-28-21	PP508-PP517
C015	C00068	CKT BKR-AC IND XFER BUS 1-C	24-28-21	PR021-PS963
C016	C00411	CKT BKR-FWD A/S STBY DOOR	52-61-01	ALL
C017	C00247	CKT BKR-FWD AIR STAIRS/STBY CONT	52-61-01	PP508-PP511
C017	C00247	CKT BKR-FWD AIR STAIRS-STBY	52-61-01	PP514-PP517
C017	C01254	CKT BKR-FWD A/S STBY CONT&FWD ENT DR IND	52-61-01	PP514-PS963
D001	C00077	CKT BKR-AIR COND PRESS IND	36-21-01	ALL
D002	C00076	CKT BKR-AIR CONDITIONING TEMP IND	21-65-01	ALL
D003	C00124	CKT BKR-AIR COND VALVE POS IND	21-67-01	ALL
D004	C00257	CKT BKR-AIR COND OVERHEAT	21-63-01	ALL
D005	C01078	CKT BKR-AIR COND OUTFLOW VALVE HEATER	21-34-01	PP508-PP517
D006	C01066	CKT BKR-DC BUS TIE NO. 2	24-32-01	PP508-PP517
D006	C01066	CKT BKR-DC BUS 2	24-32-01	PR021-PS963
D008	C00809	CKT BKR-BATTERY CHARGER	24-31-21	PP508-PP517
D008	C00809	CKT BKR-BAT CHARGER	24-31-21	PR021-PS963
D010	C00004	CKT BKR-CONTROL GENERATOR NO.1	24-21-11	ALL
D011	C00006	CKT BKR-CONTROL GENERATOR APU	24-21-31	ALL
D012	C00005	CKT BKR-CONTROL GENERATOR NO.2	24-21-21	ALL
D013	C00039	CKT BKR-28VAC GRD SERV APH	24-53-51	PP508-PP517

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P006-04

Page 2

Jun 03/2016

Panel/Access Door		Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr			Diagram	
<b>P006-04</b>	<b>PNL-A/C AIRSTAIRS CONT.A/C PWR (continued)</b>				
D013	C00039	CKT BKR-28V GRD SERV-A		24-53-51	PR021-PS963
D014	C00040	CKT BKR-28VAC GRD SERV BPH		24-53-51	PP508-PP517
D014	C00040	CKT BKR-28V GRD SERV-B		24-53-51	PR021-PS963
D015	C00041	CKT BKR-28VAC GRD SERV CPH		24-53-51	PP508-PP517
D015	C00041	CKT BKR-28V GRD SERV-C		24-53-51	PR021-PS963
E001	C00400	CKT BKR-AIR CONDITIONING RAM MOD R		21-64-03	PP508-PP510
E001	C00400	CKT BKR-AIR CONDITIONING RAM MOD R		21-64-01	ALL
E002	C00399	CKT BKR-AIR CONDITIONING RAM MOD L		21-64-02	PP508-PP510
E002	C00399	CKT BKR-AIR CONDITIONING RAM MOD L		21-64-01	ALL
E005	C00884	CKT BKR-CABIN AIR RECIRCULATION FAN		21-27-01	ALL
E008	C00808	CKT BKR-T/R NO.3		24-32-01	PP508-PP517
E008	C00808	CKT BKR-TR UNIT NO.3		24-32-01	PR021-PS963
E010	C00294	CKT BKR-GENERATOR DRIVE OIL NO.1 TEMP		24-11-11	ALL
E011	C00034	CKT BKR-GEN DRIVE OIL NO.1 LOW PRESS		24-11-11	PP508-PP517
E012	C00295	CKT BKR-GENERATOR DRIVE OIL NO.2 TEMP		24-11-21	ALL
E013	C00035	CKT BKR-GEN DRIVE OIL NO.2 LOW PRESS		24-11-21	PP508-PP517
E014	C00044	CKT BKR-28V AC MAIN NO.1		24-53-11	PP508-PP517
E014	C00044	CKT BKR-28 VOLT NO.1 MAIN		24-53-11	PR021-PS963
E015	C00046	CKT BKR-28VAC XFER BUS NO 1		24-53-31	PP508-PP517
E015	C00046	CKT BKR-28 VOLT NO.1 TRANS		24-53-31	PR021-PS963
F001	C00414	CKT BKR-PRESSURIZATION CONTROL AUTO AC		21-34-01	PP508-PP517
F001	C01269	CKT BKR-PRESSURIZATION CONTROL-MAN		21-31-11	PR021-PS963
F002	C00415	CKT BKR-PRESSURIZATION CONTROL AUTO DC		21-34-01	PP508-PP517
F002	C01270	CKT BKR-PRESSURIZATION CONTROL - AUTO 1		21-31-22	PR021-PS963
F003	C00418	CKT BKR-PRESSURIZATION CONTROL STBY AC		21-34-01	PP508-PP517
F003	C01271	CKT BKR-PRESSURIZATION CONTROL - AUTO 2		21-31-23	PR021-PS963
F004	C00417	CKT BKR-PRESSURIZATION CONTROL STBY DC		21-34-01	PP508-PP517
F004	C01272	CKT BKR-PRESSURIZATION CONTROL - IND		21-31-23	PR021-PS963
F005	C00419	CKT BKR-PRESSURIZATION CONTROL MAN AC		21-34-01	PP508-PP517
F005	C01273	CKT BKR-PRESSURIZATION CONTROL-LCD LTG		21-31-25	PR021-PS963
F006	C00416	CKT BKR-PRESSURIZATION CONTROL MAN DC		21-34-01	PP508-PP517
F008	C00842	CKT BRK-ALT BAT CHGR		24-31-21	PP508-PP517
F008	C00842	CKT BRK-ALTN BAT CHARGER		24-31-21	PR021-PS963
F010	C00464	CKT BKR-TRANS CONT NO 1		24-24-01	PP508-PP517
F010	C00464	CKT BKR-NO.1 TRANS CONT		24-24-01	PR021-PS963
F011	C00466	CKT BKR-NO.1 CSD CONT		24-11-11	ALL
F012	C00465	CKT BKR-NO.2 TRANS CONT		24-24-01	ALL
F013	C00467	CKT BKR-NO.2 CSD CONT		24-11-21	ALL
F014	C00045	CKT BKR-28V AC MAIN BUS NO.2		24-53-21	PP508-PP517
F014	C00045	CKT BKR-28 VOLT NO.2 MAIN		24-53-21	PR021-PS963

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-04

Page 3

Jun 03/2016



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P006-04</b>		<b>PNL-A/C AIRSTAIRS CONT.A/C PWR (continued)</b>			
F015	C00043	CKT BKR-28V AC TRANS NO 2	24-53-41	PP508-PP517	
F015	C00043	CKT BKR-28 VOLT NO.2 TRANS	24-53-41	PR021-PS963	
F016	C00029	CKT BKR-STBY BUS PWR	24-34-01	ALL	
F017	C00072	CKT BKR-STBY BUS	24-25-01	PP508-PP517	
F017	C00072	CKT BKR-AC IND STBY BUS	24-25-01	PR021-PS963	
F018	C01053	CKT BKR-INVERTER VOLTS	24-28-11	PR021-PS963	

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-04

Page 4 End

Jun 03/2016





# 737-300 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	Effectivity
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P006-05</b>		<b>PNL-DC PWR + IND.</b>	<b>24-31-01</b>	<b>ALL</b>	
A001	C00143	CKT BKR-INVERTER CONTROL	24-34-01	PP508-PP517	
A001	C00143	CKT BKR-INVERTER CONT	24-34-01	PR021-PS963	
A003	C00167	CKT BKR-BAT TRANS CONT	24-32-01	ALL	
A005	C00791	CKT BKR-STDBY PWR IND	24-34-01	PP508-PP517	
A005	C00791	CKT BKR-STDBY POWER IND LT	24-34-01	PR021-PS963	
A006	C00141	CKT BKR-STBY PWR-AUTO CONT	24-34-01	ALL	
B001	C00033	CKT BKR-APU CONT	49-31-01	ALL	
B002	C00145	CKT BKR-BAT BUS CONT AUTO	24-31-11	ALL	
B003	C00789	CKT BKR-BAT BUS CONT MANUAL	24-31-11	ALL	
B004	C00032	CKT BKR-FUELING & EXT PWR CONT.	24-41-11	ALL	
B005	C00790	CKT BKR-GEN PWR CONT	24-31-11	ALL	
B006	C00155	CKT BKR-DIM ENTRY LT	33-29-01	ALL	
B007	C00027	CKT BKR-DC.BUS PWR NO. 2	24-54-21	PP508-PP517	
B007	C00027	CKT BKR-DC BUS NO.2	24-54-21	PR021-PS963	
B008	C00031	CKT BKR-DC BUS POWER NO.1	24-32-01	ALL	
C001	C00136	CKT BKR-STDBY BUS IND	24-33-11	PR021-PS963	
C002	C00026	CKT BKR-BAT BUS VOLTS IND	24-33-11	ALL	
C003	C00134	CKT BKR-HOT BAT DC BUS IND	24-33-11	ALL	
C004	C00023	CKT BKR-BUS 1 DC VOLTS IND	24-33-11	PP508-PP517	
C004	C00023	CKT BKR-DC BUS INDICATION BUS NO.1	24-33-11	PR021-PS963	
C005	C00024	CKT BKR-BUS 2 DC VOLTS IND	24-33-11	PP508-PP517	
C005	C01154	CKT BKR-DC BUS IND BUS NO.2/GLY PWR CONT	24-28-04	PR021-PS963	
C006	C00025	CKT BKR-TR 3-DC VOLTS IND	24-32-01	PP508-PP517	
C006	C00025	CKT BKR-DC BUS INDICATION TR NO.3	24-32-01	PR021-PS963	
C007	C00020	CKT BKR-BAT BUS	24-32-01	ALL	
C008	C00633	CKT BKR-APU FUEL BST PMP	49-31-02	PP508-PP517	
D001	C00136	CKT BKR-STDBY BUS IND	24-33-11	PP508-PP517	
D002	C00028	CKT BKR-STBY PWR BATT	24-34-01	PP508-PP517	
D002	C00028	CKT BKR-DC STBY POWER BATT	24-34-01	PR021-PS963	
D003	C01086	CKT BKR-STBY PWR-TR	24-55-01	PP508-PP517	
D003	C01086	CKT BKR-DC STBY POWER TR	24-55-01	PR021-PS963	
D004	C01075	CKT BKR-EXTERNAL POWER CONTROL	24-41-11	PP508-PP517	
D004	C01075	CKT BKR-EXT PWR CONT	24-41-11	PR021-PS963	
D005	C01053	CKT BKR-INVERTER VOLTS	24-28-11	PP508-PP517	
D006	C00144	CKT BKR-XFER BUS IND	24-24-01	PP508-PP517	
D006	C00144	CKT BKR-AC BUS INDICATION TRANSFER	24-24-01	PR021-PS963	

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P006-05

Page 1 End

Mar 29/2012



# 737-300 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P006-11</b>		<b>PNL-GEN NO.1 PWR</b>	<b>24-51-11</b>	<b>ALL</b>	
	A002	C00819	CKT BKR-TRANSFER BUS NO 1 NORMAL	24-51-11	
	A005	C00815	CKT BKR-NO.1 GEN BUS MAIN DISTRIBUTION	24-51-11	
	A008	C00912	CKT BKR-GALLEY NO.2	25-31-01	
	B002	C00847	CKT BKR-STBY HYD PUMP-NORMAL	29-22-01	
	B002	C00819	CKT BKR-TRANSFER BUS NO.1 NORMAL	24-24-01	
	B005	C00822	CKT BKR-TRANS BUS 2 ALTERNATE	24-24-01	
	B005	C00822	CKT BKR-TRANSFER BUS NO.2 ALTERNATE	24-24-01	
	B007	C00229	CKT BKR-WINDOW ANTI-ICE L4+L5	30-41-11	
	B008	C00393	CKT BKR-WINDOW ANTI-ICE R SIDE	30-41-11	
	B009	C00228	CKT BKR-WINDOW ANTI-ICE L FRONT	30-41-11	
	C002	C00882	CKT BKR-SYS B ELEC HYD PUMP	29-21-01	
	C008	C00908	CKT BKR-GALLEY NO.1	25-31-01	
	C008	C00914	CKT BKR-GALLEY NO.1	25-31-01	
	D008	C00813	CKT BKR-GRD SERV	24-41-12	
	D008	C00813	CKT BKR-GND SERV	24-41-12	

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P006-11

Page 1 End

Mar 29/2012



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P006-12</b>		<b>PNL-GEN NO.2 EXT PWR</b>	<b>24-51-21</b>	<b>ALL</b>	
		C00821	CKT BKR-TRANS BUS 2 NORMAL	24-51-41	PP508-PP515
		C00909	CKT BKR-AFT GALLEY	25-31-01	PP514-PP517
A002		C00817	CKT BKR-NO.2 GEN BUS MAIN DISTRIBUTION	24-51-21	ALL
A008		C00848	CKT BKR-STBY HYD PUMP-ALT	29-22-01	ALL
B002		C00820	CKT BKR-TRANS BUS 1 ALTERNATE	24-24-01	PP508-PP517
B002		C00820	CKT BKR-TRANSFER BUS NO.1 ALTERNATE	24-24-01	PR021-PS963
B005		C00821	CKT BKR-TRANS BUS 2 NORMAL	24-24-01	PP508-PP517
B005		C00821	CKT BKR-TRANSFER BUS NO.2 NORMAL	24-24-01	PR021-PS963
B007		C00395	CKT BKR-WINDOW ANTI-ICE R4+R5	30-41-12	ALL
B008		C00394	CKT BKR-WINDOW ANTI-ICE R FRONT	30-41-12	ALL
B009		C00392	CKT BKR-WINDOW ANTI-ICE L SIDE	30-41-12	ALL
C002		C00881	CKT BKR-SYS A ELEC HYD PUMP	29-21-01	ALL
C005		C00913	CKT BKR-GALLEY 4B NO.2	25-31-01	PR021-PS963
C008		C00909	CKT BKR-GALLEY G4B	25-31-01	PP508-PP511
C008		C00909	CKT BKR-GALLEY 4B NO.1	25-31-01	PR021-PS963
D005		C00811	CKT BKR-BUS PROT PNL EXT PWR	24-28-11	ALL
D008		C00812	CKT BKR-GRD SERV EXT PWR	24-41-12	PP508-PP517
D008		C00812	CKT BKR-EXTERNAL POWER GND SERVICE	24-41-12	PR021-PS963

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P006-12

Page 1 End

Mar 29/2012



# 737-300 WIRING DIAGRAM MANUAL

<b>Panel/Access Door</b>	<b>Description</b>		<b>Diagram</b>	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
<b>P008-00</b>	<b>PNL-ELEX,AFT</b>		<b>91-03-29</b>	<b>ALL</b>
	C00205	CKT BKR-CAPT ELX PNL LTG	33-11-41	ALL
	C00320	CKT BKR-FWD ELEX PNL LTG	33-11-41	ALL
	C00562	CKT BKR-CONT STAND 5VAC SECONDARY	33-11-41	PP508-PP517
	C01097	CKT BKR-F/O ELEX PNL LTG	33-11-41	ALL
	C01115	CKT BKR-CENTER ELEX PNL LTG	33-11-41	ALL

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P008-00

Page 1 End

Mar 29/2012



<b>Panel/Access Door</b>	<b>Description</b>		<b>Diagram</b>	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
<b>P018-00</b>		<b>PNL-LOAD CONTROL CENTER,LEFT</b>	<b>24-54-11</b>	<b>ALL</b>
A001	C00849	CKT BRKR-STABILIZER TRIM	22-13-11	ALL
A002	C00823	CKT BKR-NO 1 ELEX BUS AC	24-58-11	ALL
A003	C00002	CKT BKR-NO 1 ELEX BUS DC	24-58-11	PP508-PP517
A003	C00002	CKT BKR-NO.1 ELECTRONICS BUS DC	24-58-11	PR021-PS963

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P018-00

Page 1 End

Mar 29/2012



# 737-300 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P018-01</b>		<b>PNL-CB ELEX SYS CAPT</b>	<b>91-03-26</b>	<b>ALL</b>	
A001	C00171	CKT BKR-VHF NAV-1 VOR/ILS	34-31-01	ALL	
A006	C00063	CKT BKR-MARKER BEACON	34-35-01	ALL	
A007	C00629	CKT BKR-GND PROX WARN	34-49-01	ALL	
B001	C01195	CKT BKR-TCAS	34-45-01	PP511-PS963	
B002	C00186	CKT BKR-ATC-1	34-53-11	ALL	
B003	C01126	CKT BKR-ADF-1 AC	34-57-11	ALL	
B004	C00060	CKT BKR-ADF 1 DC	34-57-11	ALL	
B005	C00302	CKT BKR-RADIO ALTM NO. 1	34-33-11	ALL	
B006	C00190	CKT BKR-DME-1 AC	34-55-11	ALL	
D001	C01044	CKT BKR-AFCS-MCP DC	22-11-51	ALL	
D003	C00720	CKT BKR-AUTOTHROTTLE-AC	22-31-11	ALL	
D004	C00721	CKT BKR-AUTOTHROTTLE-DC	22-31-11	ALL	
D005	C00285	CKT BKR-YAW DAMPER AC	22-23-11	ALL	
D006	C00286	CKT BKR-YAW DAMPER DC	22-23-11	ALL	
D007	C00723	CKT BKR-AFDS-AIL FORCE LIMITER	22-11-11	PP508-PP510	
E001	C01041	CKT BKR-AFCS A-SNSR EXC AC	22-11-11	ALL	
E003	C01045	CKT BKR-AFCS A-FCC DC	22-11-51	ALL	
E004	C01048	CKT BKR-AFCS A-ENGAGE INTLK A	22-11-71	ALL	
E005	C01049	CKT BKR-AFCS A-WARN LIGHT (BAT)	22-14-11	ALL	
E006	C00456	CKT BKR-AFCS A-MACH TRIM AC	22-18-11	ALL	
E007	C00457	CKT BKR-AFCS A-MACH TRIM DC	22-18-11	ALL	

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P018-01

Page 1 End

Mar 29/2012



Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P018-02</b>	<b>PNL-CB ELEX SYS-CAPT</b>		<b>91-03-26</b>	<b>ALL</b>
A001	C00049	CKT BKR-INST XMFR NO.1	34-21-02	PP508-PP517
A001	C00049	CKT BKR-INST XMFR NO.1	34-21-03	PR021-PS963
A002	C00412	CKT BKR-INSTR XFR	34-26-15	ALL
A004	C01236	CKT BKR-GPS-1	34-58-11	PR021-PS963
A005	C00755	CKT BKR-CAPT RDDMI	34-21-01	ALL
A006	C00498	CKT BKR-NO.1 AUTO XFMR	24-58-11	PP508-PP517
A006	C00498	CKT BKR-NO.1 AIR DATA AUTO XFMR	24-58-11	PR021-PS963
A008	C00300	CKT BKR-ADS COMPUTER NO.1 115V AC	34-11-11	ALL
A009	C00425	CKT BKR-ADS CMPTR NO.1 26V AC	34-11-11	ALL
B001	C01522	CB-LWR CARGO FIRE FWD DET A	26-16-22	PS962-PS963
B002	C01523	CB-LWR CARGO FIRE FWD DET B	26-16-22	PS962-PS963
B003	C00443	CKT BKR-CAPT RDDMI (ALTN)	34-21-01	PR021-PS963
B004	C01524	CB-LWR CARGO FIRE AFT DET A	26-16-23	PS962-PS963
B006	C00686	CKT BKR-CAPT VSI 115VAC	34-26-16	PP508-PP517
B006	C00686	CKT BKR-NO 1 VSI 115VAC	34-26-16	PR021-PS963
B007	C00170	CKT BKR-MACH WARN SYS-1	34-16-01	ALL
B008	C00298	CKT BKR-CAPT ALTM 26V AC	34-11-11	ALL
B009	C00357	CKT BKR-CAPT STBY ALTM/AIRSPD VIB 28V DC	34-11-11	ALL
B010	C00474	CKT BKR-CAPT MACH AIRSPD IND 26V AC	34-11-12	PP508-PP517
B010	C00474	CKT BKR-NO 1 MACH AIRSPD IND 26V AC	34-11-12	PR021-PS963
C001	C00358	CKT BKR-STBY HRZN	34-24-11	ALL
C002	C00923	CKT BKR-AC AIRBORNE DATA LOADER	34-61-12	PP514-PS963
C003	C01526	CB-LWR CARGO FIRE EXT BTL 1	26-23-61	PS962-PS963
C004	C01525	CB-LWR CARGO FIRE AFT DET B	26-16-23	PS962-PS963
C005	C01060	CKT BKR-DC DAA/FMC-1	34-26-11	ALL
C006	C00107	CKT BKR-VOICE RCDR	23-71-01	ALL
C007	C01196	CKT BKR-ACMS	31-31-02	PR021-PS963
C008	C00544	CKT BKR-FLT RECD	31-31-01	PP508-PP517
C008	C00544	CKT BKR-FLIGHT RECORDER	31-31-01	PR021-PS963
C009	C00109	CKT BKR-FLIGHT RECORDER-AC	31-31-01	ALL
C010	C00468	CKT BKR-FLIGHT RECORDER BAT	31-31-01	ALL
D001	C01029	CKT BKR-DAA NO.1-FMC	34-26-11	ALL
D002	C01011	CKT BKR-AC IRS DAA NO.1	34-26-11	PP508-PP517
D002	C01011	CKT BKR-AC DAA NO.1	34-26-11	PR021-PS963
D003	C01013	CKT BKR-DC DAA NO.1	34-26-11	ALL
D004	C01007	CKT BKR-AC IRS NO.1	34-26-11	ALL
D005	C01009	CKT BKR-DC IRS NO 1	34-26-11	ALL
D006	C01537	CB-VOICE RCDR RELAY	23-71-11	PS962-PS963
D007	C01079	CKT BKR-STALL WARN (ASYM MODE)	27-32-11	PP508-PP510
D007	C01208	CKT BKR-SMC STALL WARN ASYM MODE	27-32-12	PP511-PS963

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P018-02

Page 1

Mar 29/2012



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P018-02</b>		<b>PNL-CB ELEX SYS-CAPT (continued)</b>			
D008	C00351	CKT BKR-STALL WARN 115V AC	27-32-11	PP508-PP510	
D008	C01205	CKT BKR-SMC 1 SNSR EXC 115V AC	27-32-12	PP511-PS963	
D009	C00350	CKT BKR-STALL WARN 28V DC	27-32-11	PP508-PP510	
D009	C01204	CKT BKR-SMC 1 CMPTR DC	27-32-12	PP511-PS963	
D011	C00839	CKT BKR-HF 1	23-11-10	PR021-PS963	
D012	C00165	CKT BKR-VHF NO 1	23-12-11	PP508-PP517	
D013	C00165	CKT BKR-VHF NO 1	23-12-11	PR021-PS963	
D014	C00471	CKT BKR-VHF NO.3	23-12-31	PR021-PS963	
D015	C00058	CKT BKR-SELCAL 1	23-22-01	ALL	
E002	C01110	CKT BKR-EFIS SYM GEN L	34-22-11	ALL	
E003	C01107	CKT BKR-EFIS CONT PANEL L	34-22-11	ALL	
E004	C01108	CKT BKR-EADI L	34-22-11	ALL	
E005	C01109	CKT BKR-EHSI L	34-22-11	ALL	
E006	C01050	CKT BKR-AC CDU NO.2	34-61-01	PP508-PP511	
E006	C01239	CKT BKR-AC MCDU NO.2	34-61-01	PP514-PP517	
E007	C01192	CKT BKR-DC FMCS BITE	34-61-01	PP508-PP517	
E007	C01192	CKT BKR-FMCS BITE	34-61-01	PR021-PS963	
E008	C01017	CKT BKR-AC FMCS CMPTR	34-61-01	PP508-PP517	
E008	C01017	CKT BKR-AC FMCS CMPTR NO.1	34-61-01	PR021-PS963	
E009	C01018	CKT BKR-AC CDU NO.1	34-61-01	PP508-PP511	
E009	C01238	CKT BKR-AC MCDU NO.1	34-61-01	PP514-PS963	
E010	C01216	CKT BKR-PRINTER	31-31-02	PP511-PS963	
E013	C00839	CKT BKR-HF 1	23-11-11	PP508-PP517	
E014	C00744	CKT BKR-AC ACARS MU (INOP,COLLARED)	23-27-11	PR021-PS963	
E015	C00743	CKT BKR-DC ACARS MU (INOP,COLLARED)	23-27-11	PR021-PS963	

## CIRCUIT BREAKER LIST

D6-9129J

91-02-00

Section P018-02

Page 2 End

Jun 03/2016





Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P018-03</b>	<b>PNL-PASS CAB EXT LTG/W/HH+AA/I</b>		<b>24-54-11</b>	<b>ALL</b>
A001	C01002	CKT BKR-ANTI-ICE & RAIN COWL ENG 2	75-11-21	ALL
A002	C01001	CKT BKR-ANTI-ICE & RAIN COWL ENG 1	75-11-11	ALL
A003	C00149	CKT BKR-ANTI-ICE & RAIN CON ENG 2 & WING	75-11-21	ALL
A004	C00148	CKT BKR-ANTI-ICE & RAIN CON ENG 1 & WING	75-11-11	ALL
A005	C00146	CKT BKR-ANTI-ICE & RAIN WING VALVE	30-12-01	ALL
A009	C00079	CKT BKR-FSTN SEAT BELT SIGNS	33-25-11	PP508-PP517
A009	C00079	CKT BKR-SEAT BELT	33-25-11	PR021-PS963
A010	C00078	CKT BKR-NO SMOKING SIGNS	33-25-11	PP508-PP517
A010	C00078	CKT BKR-NO SMOKING	33-25-11	PR021-PS963
A011	C00442	CKT BKR-PASS SIGN CONT	33-25-11	ALL
A012	C00250	CKT BKR-EMERGENCY EXIT LTS	33-51-11	ALL
A013	C00274	CKT BKR-LANDING LIGHTS OUTBD R	33-42-01	ALL
A014	C00273	CKT BKR-LANDING LIGHTS OUTBD L	33-42-01	ALL
A015	C00272	CKT BKR-LANDING LIGHTS INBD R	33-42-01	ALL
A016	C00271	CKT BKR-LANDING LIGHTS INBD L	33-42-01	ALL
A018	C00122	CKT BKR-EQUIP COOLING EXH FAN CONTROL	21-58-01	ALL
B001	C00055	CKT BKR-R WINDSHLD WIPER	30-42-01	ALL
B002	C00054	CKT BKR-L WINDSHLD WIPER	30-42-01	ALL
B003	C00057	CKT BKR-RAIN REPELLENT R	30-44-01	PP508-PR029
B004	C00056	CKT BKR-RAIN REPELLENT L	30-44-01	PP508-PR029
B006	C00594	CKT BKR-WINDOW R	33-21-11	ALL
B007	C00776	CKT BKR-WINDOW L	33-21-11	ALL
B008	C00413	CKT BKR-BRT ENTRY LTS	33-29-01	ALL
B009	C00140	CKT BKR-WORK AND THRESHOLD LT	33-26-11	ALL
B010	C00242	CKT BKR-GALLEY LTS	33-26-21	PP508-PP517
B010	C00242	CKT BKR-GALLEY/ATTEND AREA LTS	33-26-21	PR021-PS963
B013	C00110	CKT BKR-WING SCAN LIGHT	33-41-01	ALL
B014	C00115	CKT BKR-POSITION STROBE	33-43-01	ALL
B015	C00113	CKT BKR-POSITION STEADY	33-43-01	PR021-PS963
B016	C00114	CKT BKR-POSITION STEADY	33-43-01	PP508-PP517
B016	C00114	CKT BKR-POSITION (BAT)	33-43-01	PR021-PS963
B018	C00836	CKT BKR-NORMAL EXHAUST FAN POWER	21-58-01	ALL
C001	C00523	CKT BKR-UPPER LEFT CAPT PITOT STATIC	30-31-01	ALL
C002	C00524	CKT BKR-LOWER RT CAPT PITOT STATIC	30-31-01	ALL
C003	C00525	CKT BKR-UPPER RT F/O PITOT STATIC	30-31-01	ALL
C004	C00522	CKT BKR-LOWER LEFT F/O PITOT STATIC	30-31-01	ALL
C005	C00238	CKT BKR-TEMP PROBE HEATER	30-31-01	ALL
C006	C00094	CKT BKR-READING LT-RIGHT 340-464	33-23-21	PP508-PP517
C006	C00094	CKT BKR-RIGHT READING STA 340-464	33-23-21	PR021-PS963
C007	C00095	CKT BKR-READING LT-RIGHT 464-500D	33-23-21	PP508-PP517

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P018-03

Page 1

Mar 29/2012



# 737-300 WIRING DIAGRAM MANUAL

Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P018-03</b>	<b>PNL-PASS CAB EXT LTG/W/HH+AA/I (continued)</b>			
C007	C00095	CKT BKR-RIGHT READING STA 464-500D	33-23-21	PR021-PS963
C008	C00096	CKT BKR-READING LT-RIGHT 500D-580	33-23-21	PP508-PP517
C008	C00096	CKT BKR-RIGHT READING STA 500D-580	33-23-21	PR021-PS963
C009	C00097	CKT BKR-READING LT-RIGHT 580-690	33-23-22	PP508-PP517
C009	C00097	CKT BKR-RIGHT READING STA 580-690	33-23-22	PR021-PS963
C010	C00098	CKT BKR-READING LT-RIGHT 690-727D	33-23-22	PP508-PP517
C010	C00098	CKT BKR-RIGHT READING STA 690-727D	33-23-22	PR021-PS963
C011	C00099	CKT BKR-READING LT-RIGHT 727D-820	33-23-22	PP508-PP517
C011	C00099	CKT BKR-RIGHT READING STA 727D-820	33-23-22	PR021-PS963
C012	C00774	CKT BKR-READING LIGHTS RIGHT 820-945	33-23-22	PP508-PP517
C012	C00774	CKT BKR-RIGHT READING STA 820-945	33-23-22	PR021-PS963
C013	C00644	CKT BKR-LOGO LT,R	33-49-01	ALL
C014	C00643	CKT BKR-LOGO LT,L	33-49-01	ALL
C015	C00111	CKT BKR-ANTI COLLISION LIGHT UPPER	33-44-01	ALL
C016	C00112	CKT BKR-ANTI COLLISION LIGHT LOWER	33-44-01	ALL
C018	C00837	CKT BKR-ALTERNATE EXHAUST FAN POWER	21-58-01	ALL
D001	C00237	CKT BKR-ELEVATOR PITOT RIGHT	30-31-01	ALL
D002	C00236	CKT BKR-LEFT ELEVATOR PITOT	30-31-01	ALL
D003	C00233	CKT BKR-DRAIN HEATERS	30-71-01	ALL
D004	C01071	CKT BKR-HTR ALPHA VANE R	30-31-02	ALL
D005	C01072	CKT BKR-HTR ALPHA VANE L	30-31-01	ALL
D006	C00087	CKT BKR-READING LT LEFT 360-492	33-23-11	PP508-PP517
D006	C00087	CKT BKR-LEFT READING STA 360-492	33-23-11	PR021-PS963
D007	C00088	CKT BKR-READING LT LEFT 492-524	33-23-11	PP508-PP517
D007	C00088	CKT BKR-LEFT READING STA 492-524	33-23-11	PR021-PS963
D008	C00089	CKT BKR-READING LT LEFT 524-610	33-23-11	PP508-PP517
D008	C00089	CKT BKR-LEFT READING STA 524-610	33-23-11	PR021-PS963
D009	C00090	CKT BKR-READING LT LEFT 610-720	33-23-12	PP508-PP517
D009	C00090	CKT BKR-LEFT READING STA 610-720	33-23-12	PR021-PS963
D010	C00091	CKT BKR-READING LT LEFT 720-727E	33-23-12	PP508-PP517
D010	C00091	CKT BKR-LEFT READING STA 720-727E	33-23-12	PR021-PS963
D011	C00092	CKT BKR-READING LT LEFT 727E-844	33-23-12	PP508-PP517
D011	C00092	CKT BKR-LEFT READING STA 727E-844	33-23-12	PR021-PS963
D012	C00773	CKT BKR-READING LIGHTS LEFT 844-945	33-23-12	PP508-PP517
D012	C00773	CKT BKR-LEFT READING STA 844-945	33-23-12	PR021-PS963
D014	C00123	CKT BKR-NOSE GEAR TAXI LIGHT	33-45-01	ALL
D015	C00245	CKT BKR-RUNWAY TURNOFF LIGHT R	33-45-01	ALL
D016	C00244	CKT BKR-RUNWAY TURNOFF LIGHT L	33-45-01	ALL
D018	C00900	CKT BKR-EQUIP COOL NORMAL SUPPLY FAN PWR	21-58-03	ALL
E001	C00226	CKT BKR-WINDOW HEAT CONTROL R FRONT-AC	30-41-12	ALL

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P018-03

Page 2

Jun 03/2016



Panel/Access Door	Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr		Diagram	
<b>P018-03</b>	<b>PNL-PASS CAB EXT LTG/W/HH+AA/I (continued)</b>			
E003	C00227	CKT BKR-WINDOW HEAT CONTROL R SIDE-AC	30-41-11	ALL
E005	C00234	CKT BKR-DRAIN MAST HTRS-GND	30-71-01	ALL
E006	C00596	CKT BKR-CEILING CONTROL BRT L	33-22-11	PP508-PP517
E007	C00595	CKT BKR-CEILING CONTROL/NIGHT	33-22-11	ALL
E008	C00593	CKT BKR-CEILING R	33-22-11	ALL
E009	C00591	CKT BKR-CEILING GND SERV-L	33-22-11	PP508-PP517
E009	C00591	CKT BKR-CEILING-L	33-22-11	PR021-PS963
E009	C01200	CKT BKR-WINDOW BRT CONT	33-21-11	PP511-PP517
E010	C00590	CKT BKR-CEILING GND SERV R	33-22-11	ALL
E011	C00592	CKT BKR-CEILING GND SERV WINDOW/BRT L	33-22-11	PP508-PP510
E011	C01200	CKT BKR-WINDOW BRT CONT	33-21-11	PR021-PS963
E012	C00184	CKT BKR-CEILING GND SERV NIGHT/CONT	33-22-11	ALL
E014	C00139	CKT BKR-SERVICE LIGHTING ELEC RACK	33-34-01	ALL
E015	C00128	CKT BKR-SERVICE LIGHTING CARGO COMPT AFT	33-36-01	ALL
E016	C00127	CKT BKR-SERVICE LIGHTING CARGO COMPT FWD	33-36-01	ALL
E018	C00901	CKT BKR-EQUIP COOL ALT SUPPLY FAN PWR	21-58-03	ALL
F001	C00224	CKT BKR-WINDOW HEAT CONTROL L FRONT-AC	30-41-11	ALL
F003	C00225	CKT BKR-WINDOW HEAT CONTROL L SIDE-AC	30-41-12	ALL
F005	C00700	CKT BKR-DRAIN MAST HTRS-AIR	30-71-01	ALL
F006	C00156	CKT BKR-OXYGEN IND	35-21-11	ALL
F007	C00785	CKT BKR-MANUAL OXYGEN CONTROL	35-21-21	ALL
F008	C00784	CKT BKR-PASS OXYGEN RIGHT	35-21-21	ALL
F009	C00783	CKT BKR-PASS OXYGEN LEFT	35-21-21	ALL
F010	C00162	CKT BKR-LAV DOME LT	33-26-31	PP508-PP517
F010	C01217	CKT BKR-LAVATORY OCCUPIED SIGN	33-26-31	PP511-PS963
F011	C00163	CKT BKR-LAVATORY MIRROR	33-26-31	ALL
F012	C01106	CKT BKR-CEILING CONTROL BRT R	33-22-11	PP508-PP517
F014	C00389	CKT BKR-SERVICE LIGHTING ACCESS COMPT	33-35-01	ALL
F015	C00125	CKT BKR-SERVICE LIGHTING WHEEL WELLS	33-32-01	ALL
F016	C00126	CKT BKR-SERVICE LIGHTING AIRCOND COMPT	33-33-01	ALL
F017	C01116	CKT BKR-EQUIP COOL SUPPLY FAN CONT NORM	21-58-03	ALL
F018	C01117	CKT BKR-EQUIP COOL SUPPLY FAN CONT ALTN	21-58-03	ALL

## CIRCUIT BREAKER LIST

D6-9129J

91-02-00

Section P018-03

Page 3 End

Jun 03/2016



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P018-04</b>		<b>PNL-CB PASS ACCOMMODATIONS</b>	<b>24-54-11</b>	<b>ALL</b>	
A001	C01148	CKT BKR-PASS & CREW CALL/LAV SMK DET.	33-27-11	ALL	
A002	C00138	CKT BKR-WATER QTY INDICATION	38-41-01	ALL	
A005	C01073	CKT BKR-LAVATORY WATER HEATER D	38-21-01	ALL	
A006	C00104	CKT BKR-LAV A WATER HTR	38-21-01	ALL	
A007	C01096	CKT BKR-LAVATORY WATER HEATER E	38-21-01	ALL	
B003	C00888	CKT BKR-LAV D FLUSH MOTOR	38-31-01	PP508-PP517	
B003	C00888	CKT BKR-LAV D FLUSH MOTOR 3 PH.	38-31-01	PR021-PS963	
B006	C00899	CKT BKR-LAV E FLUSH MOTOR 3 PH	38-31-01	ALL	
C001	C00118	CKT BKR-VACUUM CLEANER RECEPTACLE FWD	25-29-01	ALL	
C002	C00119	CKT BKR-VACUUM CLEANER RECEPTACLE AFT	25-29-01	ALL	
C006	C00814	CKT BKR-LAV A FLUSH MOTOR	38-31-01	PP508-PP517	
C006	C00814	CKT BKR-LAV A FLUSH MOTOR 3 PH.	38-31-01	PR021-PS963	

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P018-04

Page 1 End

Mar 29/2012



Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
<b>P018-05</b>		<b>PNL-CB HOT BAT BUS</b>	<b>91-03-27</b>	<b>ALL</b>	
A001	C00169	CKT BKR-SWITCHED HOT BATTERY BUS	24-56-01	ALL	
B001	C00022	CKT BKR-HOT BAT BUS	24-56-01	PP508-PP517	
B001	C00022	CKT BKR-HOT BATTERY BUS	24-56-01	PR021-PS963	
C001	C00798	CKT BKR-APU START	49-31-01	PR021	
D001	C00030	CKT BKR-INVERTER POWER	24-34-01	PP508-PP517	
D001	C00030	CKT BKR-INVERTER PWR	24-34-01	PR021-PS963	

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P018-05

Page 1 End

Mar 29/2012



# 737-300 WIRING DIAGRAM MANUAL

<b>Panel/Access Door</b>	<b>Description</b>		<b>Diagram</b>	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
<b>P041-00</b>	<b>PNL-P1 AND P2 5V LTG</b>		<b>33-11-11</b>	<b>ALL</b>
	C00332	CKT BKR-CAPT'S PNL LTG	33-11-11	ALL
	C00333	CKT BKR-CAPT'S PNL LTG	33-11-11	ALL
	C00334	CKT BKR-CAPT'S PNL LTG	33-11-11	ALL
	C00340	CKT BKR-CTR PNL LTG	33-11-31	ALL
	C00341	CKT BKR-CTR PNL LTG	33-11-31	ALL
	C00342	CKT BKR-CTR PNL LTG	33-11-31	ALL
	C00343	CKT BKR-CTR PNL LTG	33-11-31	ALL
	C01147	CKT BKR-P2-P7 LTG 5V AC SEC	33-11-31	ALL

## CIRCUIT BREAKER LIST

D6-9129J

**91-02-00**

Section P041-00

Page 1 End

Mar 29/2012



<b>Panel/Access Door</b>	<b>Description</b>		<b>Diagram</b>	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
<b>P042-00</b>	<b>PNL-P3 5V LTG</b>		<b>33-11-21</b>	<b>ALL</b>
	C00336	CKT BKR-P3-P23-P10 LTG 28V AC SEC	33-11-21	ALL
	C00337	CKT BKR-P3-P23-P10 LTG 5V AC SEC	33-11-21	ALL
	C00338	CKT BKR-P3-P23-P10 LTG 5V AC SEC	33-11-21	ALL
	C00701	CKT BKR-EMER LT	33-11-32	ALL
	C01093	CKT BKR-OXYGEN MASK STOWAGE LT	33-11-32	PP508-PP517
	C01129	CKT BKR-STBY INSTR LTS	33-11-32	ALL
	C01130	CKT BKR-STBY INSTR LTS	33-11-33	ALL

**CIRCUIT BREAKER LIST**

D6-9129J

**91-02-00**

Section P042-00

Page 1 End

Mar 29/2012